



## ***DISPLAY PARTNER INSTRUCTION MANUAL***

THIS PRODUCT CONSISTS OF A BUILT IN TV/FM TUNER, 4 INPUT SOURCES (FIRST SOURCE DEFAULTS TO TV/FM TUNER), A 48-WATTS STEREO DIGITAL AMPLIFIER, AND A COMPOSITE VIDEO OUTPUT FOR MONITORING TV/CABLE BROADCASTS.

### **BASIC INSTALLATION**

1. CONNECT ANTENNAS TO CORRESPONDING TV/FM ANTENNA TERMINALS
2. CONNECT SPEAKERS TO CORRESPONDING SPEAKER TERMINALS, OBSERVING PROPER POLARITIES (RED IS FOR POSITIVE AND BLACK IS FOR NEGATIVE)
3. COMPOSITE AUDIO/ VIDEO OUTPUT TO ANY MONITOR WITH RCA INPUT JACKS
4. PLUG IN THE POWER SUPPLY ADAPTOR TO ITS CORRESPONDING SOCKETS (POWER CORD TO AC AND MINI PLUG TO UNIT)

### **OPERATION**

1. WITH THE SUPPLIED REMOTE CONTROL, INSTALL BATTERIES, AND INPUT CABLE CODE 0- 2- 9.

PRESS *SEARCH* BUTTON UNTIL RED LIGHT APPEARS, THEN HIT CABLE, AND FINALLY PRESS 0-2-9. RED LIGHT SHOULD BLINK FOR A FEW SECONDS, AND WILL TURN OFF. THIS MEANS CODE HAS BEEN ACCEPTED.

2. **ON TV MODE** OF THE REMOTE, YOU CAN CHANGE SOURCES.

*BUTTON 1* FOR TV/FM TUNER, *BUTTON 2* FOR SECOND SOURCE, AND SO FORTH. “*VOL*” BUTTON FOR VOLUME UP AND DOWN, “*CHAN*” BUTTON FOR INPUT SOURCES AS WELL.

3. **ON CABLE MODE** OF THE REMOTE, YOU CAN CHANGE CHANNELS OR SWITCH FROM TV TO FM.  
ALSO, “*VOL*” *BUTTONS* ARE ACTIVE FOR ADJUST VOLUME LEVELS. “*CHAN*” *BUTTON* WILL SCAN CHANNELS UP AND DOWN (THIS WILL NOT SET PROPER LOCAL CHAN FREQUENCY BECAUSE IT IS DESIGNED TO INPUT ANY FREQUENCY FOR WORLDWIDE OPERATIONS.) FOR FAST ACCESS TO LOCAL OR CABLE CHANNELS PRESS THE CORRESPONDING NUMERIC BUTTONS.

**TO SWITCH TO FM MODE**, HIT ENTER BUTTON FIRST, THEN PRESS THE CORRESPONDING 3 DIGIT NUMERIC BUTTONS, AND HIT ENTER AGAIN.

**TO GO BACK TO TV/CABLE MODE**, PRESS 2 DIGIT CHANNEL NUMERIC BUTTONS, THEN HIT ENTER.

4. LASTLY, THE ANTENNA/CABLE TOGGLE SWITCH IS LOCATED ON THE BACK OF THE UNIT. THIS WILL SWITCH YOU TO TV OR CABLE CHANNELS.

Please contact Pragmatic at 408 735 0300 from 9 – 6 p.m. PST should you require further assistance.



