




STEP #1 - Install wall brackets with appropriate distance applied.

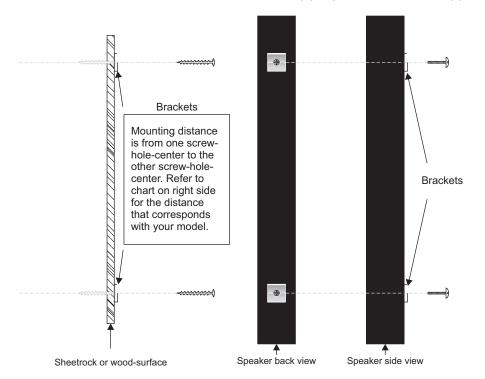

STEP #2 - Mount speaker with brackets to installed wall brackets.

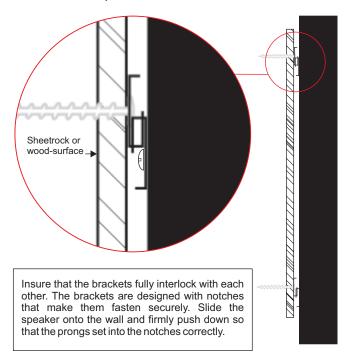

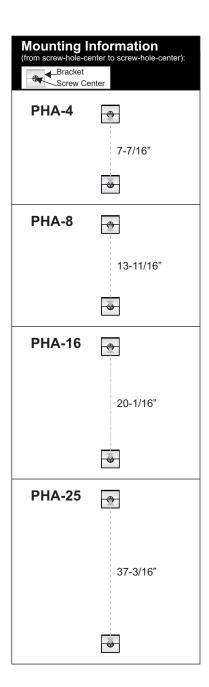



Go Green! Get Product Specifications PDFs Online @ www.Pragmatic1.com






STEP #1 - Install Bracket-A; the larger of the two brackets, onto the back of the PHA speaker. The direction of the brackets is dependent on the placement at the T-Bar(s), see example below.

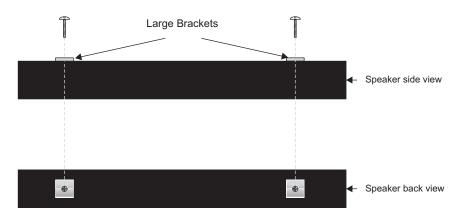


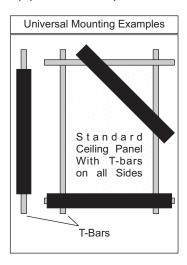

STEP #2 - Affix the speaker to the metal T-Bar located in your ceiling. While supporting the speaker so it doesn't fall, screw Bracket-B into Bracket-A from the side and make sure the bracket is clamped over the T-Bar. When finished, the unit should look the illustration and photo below.

NOTE: This process may require two people to accomplish. You will also need to remove ceiling panels.

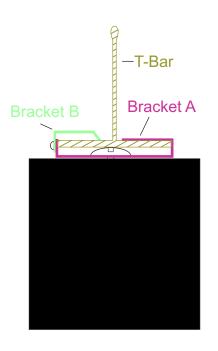

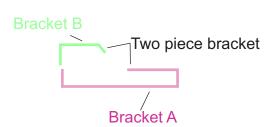



Go Green! Get Product Specifications PDFs Online @ www.Pragmatic1.com