



Installation of wide dispersion speaker in an open ceiling commercial environment

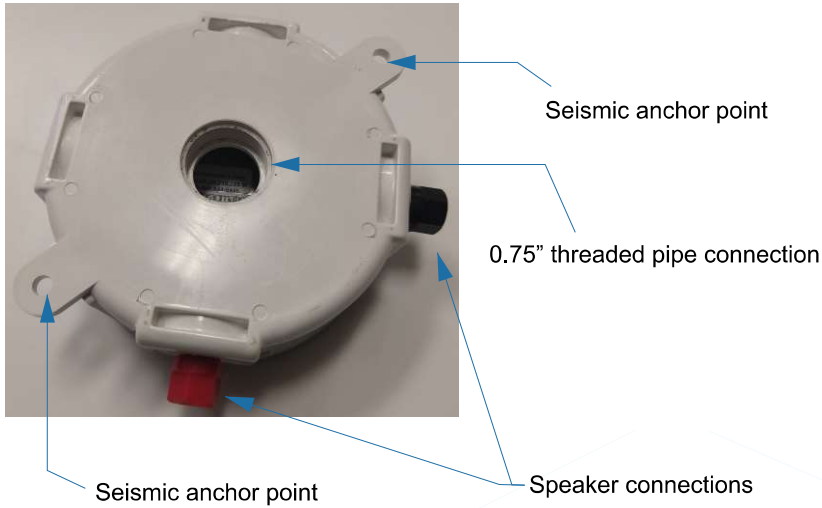

Step 1:

Prepare the 0.75" threaded pipe with speaker wire emerging out through a 0.25" hole about 2" from the end of the pipe.

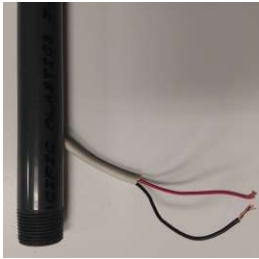

Step 2:

Align the 0.75" threaded pipe with the threaded pipe connection on the speaker. Rotate the speaker until the speaker is tightly secured to the threaded pipe.



Step 3:

Strip the speaker wires and make connections to the speaker terminals as shown below.



Step 4:

Secure the speaker to the threaded pipe with screws and seismic strap or aircraft cable through the seismic anchor point.



TO PLACE an ORDER or for QUESTIONS

Emails Us: sales@pragmatic1.com, Call Us: (408) 748-1100