

Installation Instructions for Pragmatic PHA-UTM-42KIT

(Read complete instructions to the end before proceeding with the assembly and installation)

Step 1.

Please verify all the components of the kit are present. If any component is missing, please contact the factory immediately.

VESA straps 28" long	Qty. 2
Speaker mounting pipe 40" long	Qty. 1
Quick Clamps	Qty. 4 (Packaged in yellow bubble-pack bag)
M6-20mm screws	Qty. 2 (Packaged in yellow bubble-pack bag)

Tools required for assembly: Philips head screwdriver, adjustable pliers, etc. (not provided in the kit)

VESA strap:



Speaker mounting pipe:



Quick Clamps and screws:



Once the complete kit is accounted for as shown in the pictures above, proceed to step 2.

Step 2.




Using the Philips screwdriver, gently remove the two M6 screws from the rear of the PHA speaker.

IMPORTANT: Keep these two screws in a safe place. **DO NOT MISPLACE THESE SCREWS.** They will be needed to complete Step 5.

Step 3.

Gently pull apart the plastic clasps of the Quick Clamp. Insert the M6-20mm screw provided in the kit into the mounting hole of the Quick clamp as shown below. Repeat the procedure there are two Quick Clamps ready for Step 4.

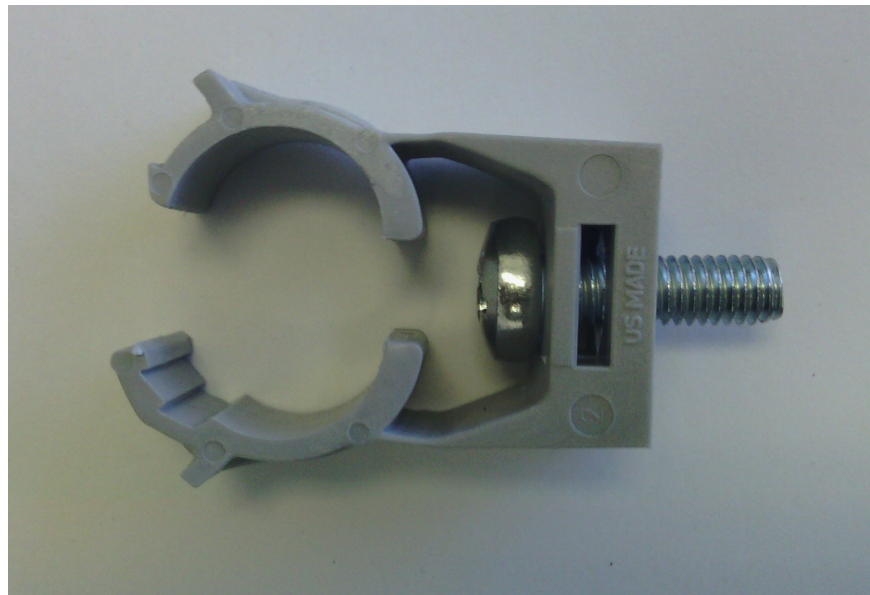

Step 4.

Take one of the clamp assembly from step 3 and connect it to the mounting hole on the PHA speaker as shown below.



Before the M6-20mm screw is tightened, make sure that the position of the clamp is as shown below. The clamp opening should be such that the top of the Quick Clamp is parallel to the top surface of the PHA speaker. This will assure that the speaker mounting pipe will be in parallel to the PHA speaker.




Repeat the above procedure so both mounting holes on the PHA speakers have the Quick Clamps attached. Now the speaker is ready to be attached to the speaker mounting pipe. It should look like the picture below.



Step 5.

Prepare the VESA mounting straps for the speaker mounting pipe.

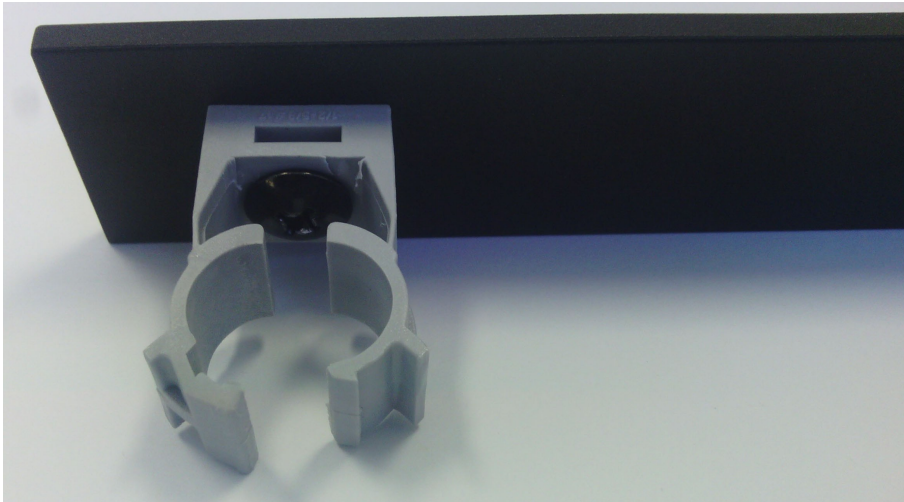

Gently pull apart the plastic clasps of the Quick Clamp. Insert the original M6 screw that was removed from the PHA speaker in Step 2 into the mounting hole of the Quick Clamp.

Attach this Quick Clamp assembly to the top threaded hole on the VESA mounting strap as shown in the picture above. Please make sure the side of the Quick Clamp is parallel to the long end of the VESA mounting strap as shown in the picture below.



Repeat the above procedure to prepare the second VESA mounting strap with the Quick Clamp. Now there should be two VESA mounting straps ready for installation on the back of the TV/monitors.



Step 6.

Place the VESA mounting straps from Step 5 on the rear of the TV/Monitor as shown below. Make sure that the Quick Clamps on the straps are facing towards the front of the monitor.



Adjust the VESA mounting strap so the Quick Clamp is at an appropriate height above the TV/monitor. Allow for the tilt-down of the PHA speaker when it is above the speaker. Suggested height is 3" to 4" above the top of the TV/monitor or as appropriate and necessary for the application and aesthetically appealing.

Place the VESA mounting brackets for the TV/monitor on top of the VESA mounting straps and secure the complete assembly with appropriate length screws. (NOT PROVIDED BY PRAGMATIC) When selecting the length of these screws, please add the 3/16" thickness of the VESA mounting straps to the thickness of the VESA mounting brackets. **If these screws are not long enough, there is a real danger of the entire assembly falling down and causing grave bodily harm.**


Once the entire assembly is properly secured and mounted to the wall / ceiling as required, proceed to step 7 to install the speaker mounting pipe to the Quick Clamps on the VESA mounting straps.

Step 7.


Please make sure that the speaker mounting pipe is aligned and centered to the TV/monitor. Gently press the speaker mounting pipe into the two Quick Clamps on top of the TV/monitor from step 6. The first click with set the pipe into the Quick clamps. Press again to secure and lock the pipe into the Quick Clamps. The pipe should now be firmly in place and secured. Proceed to step 8 to install the PHA speaker to the speaker mounting pipe.

Step 8.

Take the PHA speaker assembly prepared in step 4 and attach it to the speaker mounting pipe on top of the TV/monitor from step 7. Press gently on to the pipe so only a single click is heard. This position of the Quick Clamp will allow for adjusting the angle of the PHA speaker.

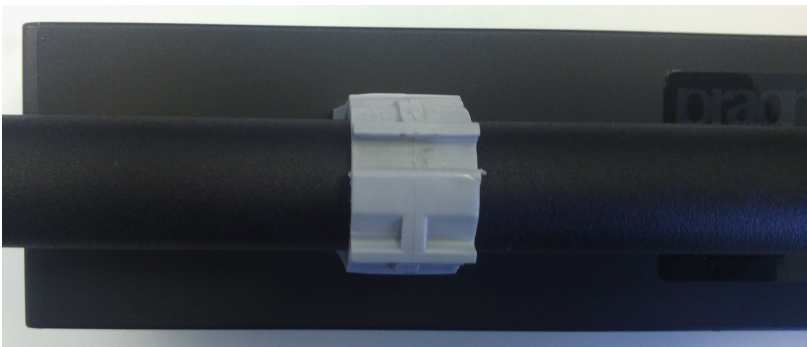

The picture below shows the first locking position of the Quick Clamp. This position allows for free rotation of the PHA speaker about the mounting pipe. Adjust the angle of projection of the PHA speaker towards the desired location and proceed to step 9 to lock in the position..

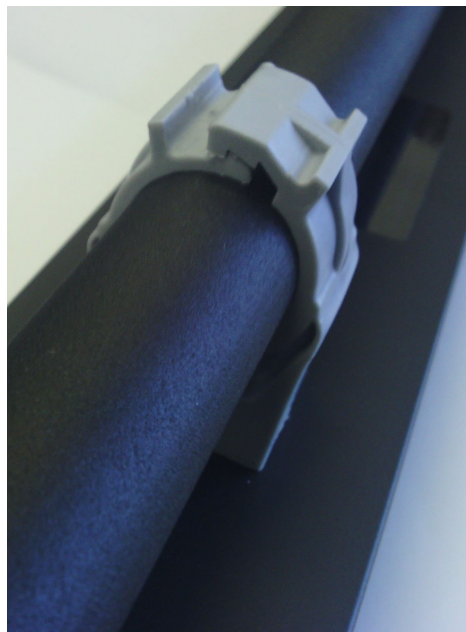


Step 9.


Use adjustable pliers to close the plastic clasps and lock into the second position as shown below.



The picture below shows a properly locked and secured Quick Clamp to the speaker mounting pipe.

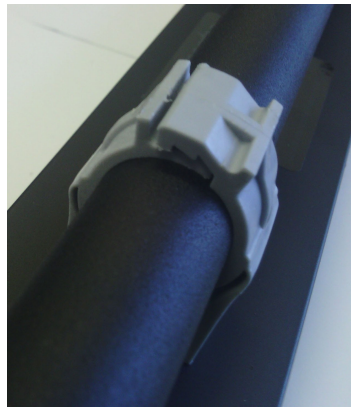

The picture below shows the final view once the speaker is properly secured to the mounting pipe.

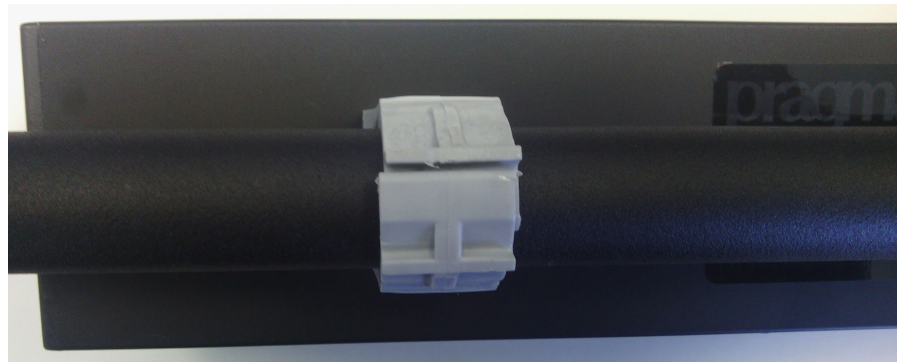

Congratulations! You have now installed the high-performance PHA speaker correctly to the TV/monitor. Should you have any questions or concerns, please contact factory for technical support.

We thank you very much for choosing Pragmatic products.